


# SEALEVEL®

## COMM+4.422.PCIe User Manual

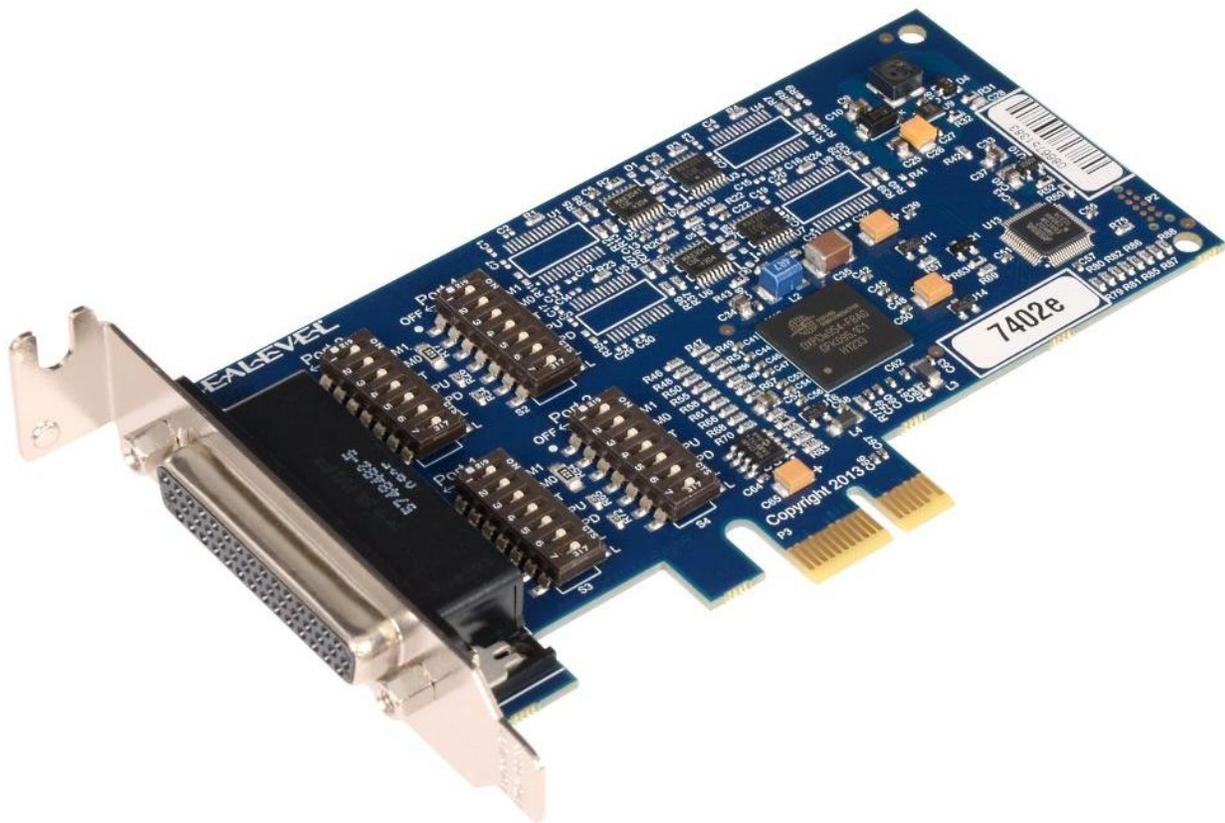

Item# 7402e and 7402eS

# Contents

- Introduction ..... 4
- Before You Get Started ..... 5
  - What’s Included ..... 5
  - Advisory Conventions ..... 5
  - Optional Items ..... 6
    - Cables ..... **Error! Bookmark not defined.**
    - Terminal Blocks ..... **Error! Bookmark not defined.**
- Hardware Description ..... 7
  - PCI Express Board ..... 7
  - DB44F Board Connector ..... 7
  - DB9M Serial Connectors ..... 7
- Hardware Configuration ..... 8
  - Address and IRQ selection ..... 8
  - Clock Modes ..... 8
  - Baud Rates ..... 8
  - Electrical Interface Selection ..... 9
  - Line Termination ..... 9
  - RS-485 ‘Echo’ ..... 9
- Software Installation ..... 11
  - Where to Get Sealevel Software ..... 11
  - Windows Installation ..... 11
  - Guided Software Installation ..... 12
  - Manual Software Installation ..... 15
  - Upgrading to the Current SeaCOM Driver ..... 15
  - Linux Support ..... 15
- Technical Description ..... 16
  - RS-422/485 (CA-200 DB-9) Connector Pin Assignments ..... 16
  - RS-422/485 (DB-44) ..... 17
- Specifications ..... 18
  - Environmental Specifications ..... 18
  - Manufacturing ..... 18
  - Power Consumption ..... 18
- Appendix A - Troubleshooting ..... 18
- Appendix B - Handling Instructions ..... 20

Appendix C - Electrical Interface..... 21  
Appendix D - Asynchronous Communications ..... 22  
Appendix E - Mechanical Drawing..... 23  
Warranty..... 24

# Introduction

The Sealevel COMM+2.422.PCIe (Item# 7402e) provides a PCI Express 1.0a compliant interface adapter with four asynchronous serial ports for industrial automation and control applications. The serial ports are field selectable for RS-422 or RS-485 and support data rates to 921.6 Kbps.


RS-422 mode for is designed for long distance device connections up to 4000ft. where noise immunity and high data integrity are essential. RS-485 mode can capture data from multiple peripherals in an RS-485 multi-drop network. Up to 31 unit load RS-485 devices can be connected to each port to automate your data collection. You can even mix the ports in any of the interface combinations to provide maximum flexibility to your application.

In RS-485 mode, the transmitter is automatically enabled in hardware, eliminating the need for application software control. This allows the 7402e to be used with standard serial communications applications and removes the risk of bus contention and data corruption.

The 7402e ships with a low profile PC bracket for use in systems with a low profile PCI Express slot. If you need a standard size PC bracket, order the 7402eS.

## FEATURES

- PCI Express four-port serial interface adapter
- Each port individually configurable for RS-422 or RS-485
- High performance OXPCIe954 UART with 128-byte FIFOs
- Each port supports data rates to 921.6K bps
- Oscillator and clock prescaler support wide range of baud rates
- Supports 9-bit protocol framing
- PCI Express 1.0a compliant via x1 connector
- Compatible with all low profile and standard size PCI Express slots
- Includes 36" cable that terminates to four DB9M connectors (Item# CA200)
- Automatic RS-485 enable/disable

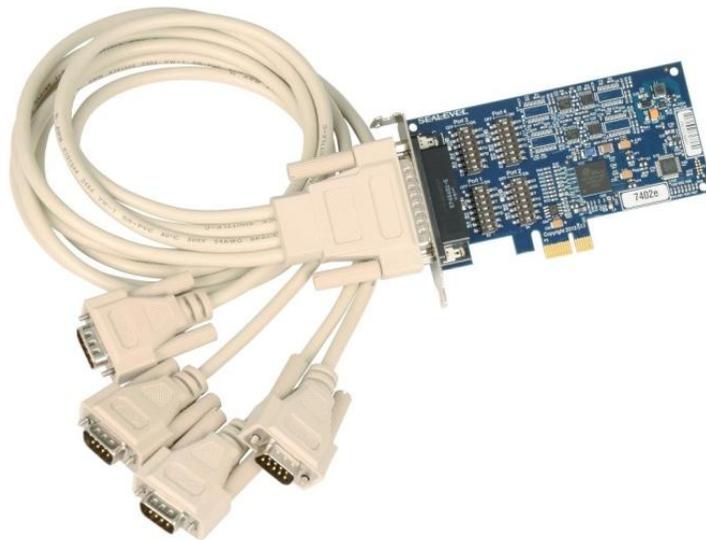

# Before You Get Started

## What's Included

The COMM+4.422.PCIe is shipped with the following items. If any of these items are missing or damaged, please contact Sealevel for replacement.

- COMM+422.PCIe Serial I/O Adapter - Four-Port 422/485 Serial Interface
  - 7402e - PCI Express Board with Low Profile PC Bracket
  - 7402eS - PCI Express Board with Standard Height PC Bracket
- CA200 - DB44 Male to (4) DB9 Male Cable
- Sealevel Software CD - SeaCOM software and user manual

## Advisory Conventions



**Warning** - The highest level of importance used to stress a condition where damage could result to the product or the user could suffer serious injury.



**Important** - The middle level of importance used to highlight information that might not seem obvious or a situation that could cause the product to fail.



**Note** - The lowest level of importance used to provide background information, additional tips, or other non-critical facts that will not affect the use of the product.

## Optional Items

Depending upon your application, you are likely to find one or more of the following items useful with the COMM+4.422.PCIe. All items can be purchased from our website ([www.sealevel.com](http://www.sealevel.com)) by calling our Sales team at +1 864-843-4343.

<b>DB9 to DB25 Serial Cable (Item# CA176)</b>	
DB9 Female (RS-422) to DB25 Male (RS-530) Cable, 10 in Length	
<b>DB9 to DB25 Serial Cable (Item# CA177)</b>	
DB9 Female to DB25 Male Standard RS-232 Modem Cable, 72 inch Length	
<b>DB9 Serial Extension Cable (Item# CA127)</b>	
DB9 Female to DB9 Male Extension Cable, 72 inch Length	
<b>Terminal Block Kit (Item# KT106)</b>	
Terminal Block Kit - TB06 + (2) CA127 Cables	
<b>Terminal Block Kit (Item# KT105)</b>	
Terminal Block Kit - TB05 + CA127 Cable	
<b>Terminal Block Kit (Item# TB34-4)</b>	
Terminal Block Kit (4 Pack) - DB9 Female to 5 Screw Terminals (RS-422/485)	

# Hardware Description

## PCI EXPRESS BOARD


The 7402e is a low profile PCI Express 1.0a compliant board via single-lane x1 slot. It can be used in any single- or multi-lane PCI Express slot. It is available in standard height PCI Express as item# 7402eS.

## DB44F BOARD CONNECTOR

The board integrates a DB44 female connector for interfacing the four serial ports via the included cable.

## DB9M SERIAL CONNECTORS

The 7402e ships with a four-port cable (Item# CA200) that includes four DB9 male serial connectors. The pin out for these connectors is detailed in the following Technical Description section.

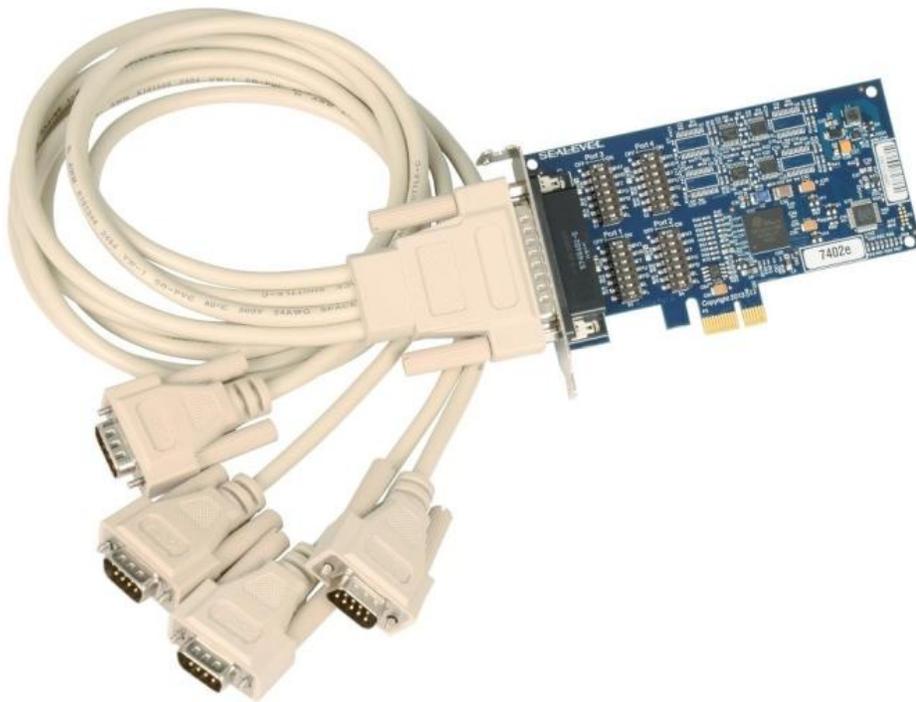

# Hardware Configuration

## ADDRESS AND IRQ SELECTION

The COMM+4.422.PCIe is automatically assigned I/O addresses and IRQs by your motherboard BIOS or by a 'Plug-n-Play' Operating System. Adding or removing other hardware or moving the adapter to another slot may change the assignment of I/O addresses and IRQs.

## CLOCK MODES

The COMM+4.422.PCIe derives a 62.5MHz clock from the PCI express link which is divided by a 8 bit clock prescaler and a 16 bit clock divisor to provide a wide range of possible baud rates. Note that there are many combinations that can give the same result (e.g. Prescaler=1 and Divisor = 8, Prescaler =2 and Divisor = 4, or Prescaler=8 and Divisor = 1). As long as the calculated data rate is within +/- 2% you should communicate fine.

## BAUD RATES

The following table shows some common data rates and the rates you should choose to achieve them when using the COMM+4.422.PCIe.

For This Data Rate	Clock Prescaler	Choose This Divisor DLM:DLL
1200 bps	1	3255
2400 bps	3.625	449
4800 bps	1.875	434
9600 bps	1.875	217
19.2K bps	1.375	148
38.4K bps	1.375	74
57.6K bps	22.625	3
115.2K bps	1	34
230.4K bps	1	17
460.8K bps	2.125	4
921.6K bps	2.125	2

## ELECTRICAL INTERFACE SELECTION

Each of the four ports on the COMM+4.422.PCIe can be individually configured as an, RS-422, or RS-485 interface. This is selectable via the port DIP-switch; each is labeled with its port number.

Switch 1 (Silk M1)	Switch 2 (Silk M0)	Mode Select
OFF	OFF	RESERVED
OFF	ON	422
ON	OFF	485 With Echo
ON	ON	485 No Echo

## LINE TERMINATION

Typically, each end of the RS-485 bus must have line-terminating resistors (RS-422 terminates at the receive end only). A 120-ohm resistor is across each RS-422/485 input in addition to a 1K-ohm pull-up/pull-down combination that biases the receiver inputs. Each switch allows customization of this interface to specific requirements. Each switch position corresponds to a specific portion of the interface. If multiple COMM+4.422.PCIe adapters are configured in an RS-485 network, only the boards on each end should have switches T, P & P ON. Refer to the following table for each position's operation:

Switch	Name	Function
3	T	Adds or removes the 120 ohm termination.
4	PU	Adds or removes the 1K ohm pull-up resistor in the RS-422/RS-485 receiver circuit
5	PD	Adds or removes the 1K ohm pull-down resistor in the RS-422/RS-485 receiver circuit
6	L	Connects the TX- to RX- for RS-485 two-wire operation.
7	L	Connects the TX+ to RX+ for RS-485 two-wire operation.

## RS-485 'ECHO'

In 'RS-485 With Echo' mode both the receiver and the transmitter are enabled simultaneously. Every time a character is transmitted, it is also received. This can be beneficial if the software can handle echoing (i.e. using received characters to throttle the transmitter) or it can confuse the system if the software does not. An RS-485 'No Echo' option is selected by placing both Mode switches (M0, M1) in the 'On' position.

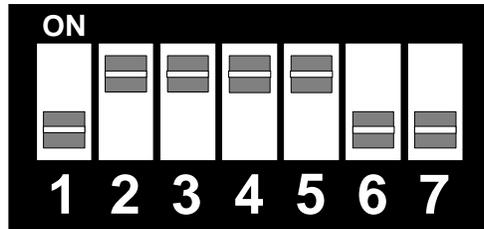


Figure 1 - RS-422 Mode

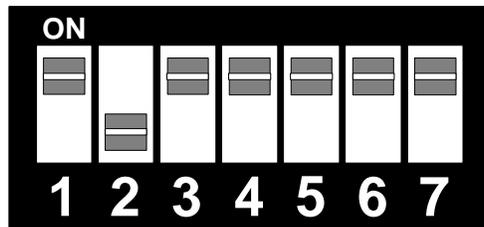


Figure 2 - RS-485 two-wire with 'Echo'

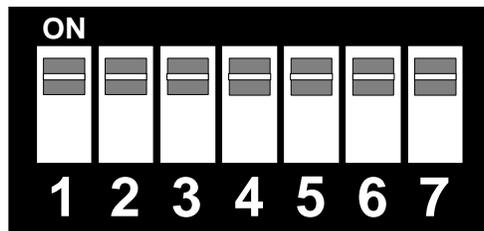


Figure 3 - RS-485 two-wire No 'Echo'

# Software Installation

This section contains helpful information pertaining to the installation of supported Sealevel Systems, Inc. software packages. First, the process of acquiring the software is discussed. Next, the installation is detailed in a step-by-step guide for Windows and Linux operating systems.

## WHERE TO GET SEALEVEL SOFTWARE

All Sealevel products are shipped with media containing the installers for each software package available. If the media is otherwise unavailable or if desired, the current versions of Sealevel software packages can be obtained from the Sealevel website (see following instructions). If you already have the Sealevel software, proceed to the Windows or Linux installation section.

Sealevel software for Windows and Linux operating systems is available at these links:

- [Software for Windows](#)
- [Software for Linux](#)

Choose the link for the desired software package and click on the 'Download File' link to download the current driver.

## WINDOWS INSTALLATION



Do not connect the hardware until the software has been successfully installed. To install Sealevel software, you must log in as an administrator or have administrator privileges in Windows.




To install Sealevel software, you must log in as an administrator or have administrator privileges in Windows.

## GUIDED SOFTWARE INSTALLATION

1. Insert the Sealevel media into your PC.
2. If the 'AutoRun' feature is enabled for this media the software will automatically launch.
3. Otherwise, navigate to the root directory of the media and double-click the 'autorun.exe' application to launch the installation window.
4. Select 'Install' as demonstrated in the image below.



5. Type the part number for your adapter in the text box and press the 'Enter' key, or click on the drop box to scroll from the listing to select your product and press the 'Enter' key.

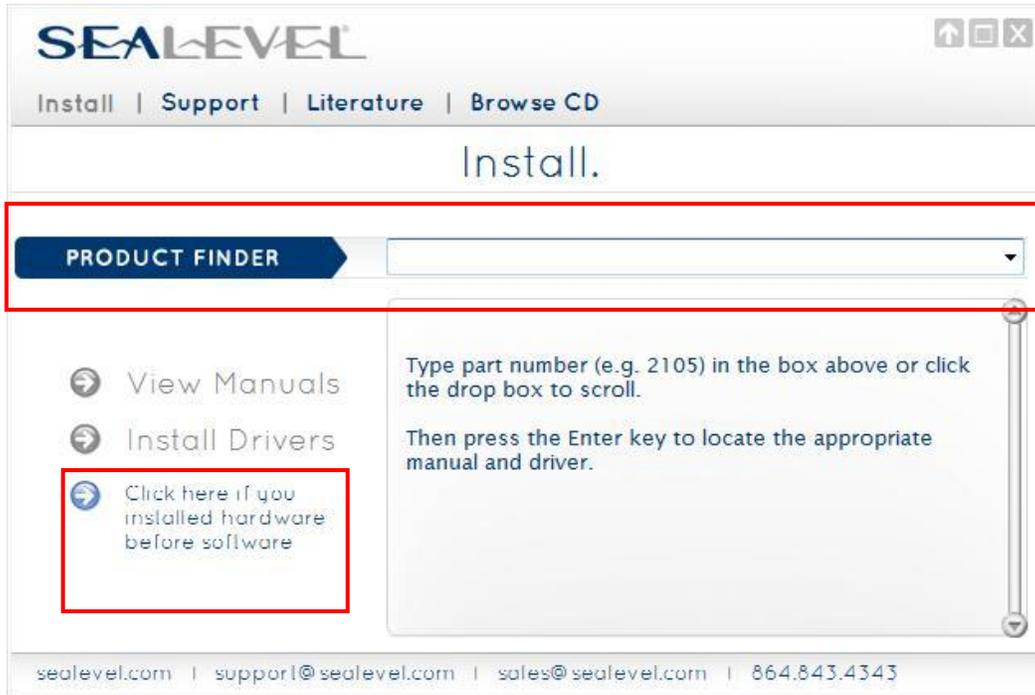

If you installed your hardware prior to loading/installing the software, please click on the 'Click here if you installed hardware before software' link and follow the listed instructions.

6. Click the 'Install Drivers' button to launch the Installation Wizard.
7. When the InstallShield Wizard' window appears, click the 'Next' button to initiate the software installation.
8. When the 'License Agreement' window appears, accept the terms and click 'Next' to continue. You can click the 'Print' button to print out a copy of the agreement for your records. If you do not accept the terms of the agreement, the installation will stop.
9. When the 'Ready to Install the Program' window appears, click the 'Install' button to install the software onto the hard drive of your computer. The files will be automatically installed into the 'C:\Program Files' folder on your computer. Some versions of Windows will halt the installation and provide you with a dialog box that will ask you for permission for the installer to make changes to your

computer. Click on the 'Allow' button to continue installation of your Sealevel software.

10. The following dialog box may appear, as shown below. Click the 'OK' button to continue.



- N** All Sealevel Systems software drivers have been fully tested by Sealevel. Clicking 'OK' will not harm your system.

11. The following dialog box may appear, as shown below. Click the 'OK' button to continue.



- N** This is a notification that if you are upgrading from a previous driver version, you should remove the associated Device Manager hardware entries and reinstall the adapter after the installing the SeaCOM software.

12. The setup file will automatically detect the operating environment and install the proper components. Next follow the information presented on the screens that follow. Once the installation is complete, close the disk installation window.

13. Refer to the Physical Installation section to connect and install your adapter.

## MANUAL SOFTWARE INSTALLATION

1. To install a software package from the Sealevel media; browse the Sealevel Systems media 'Software' directory. For example: Software\SeaCOM\Windows\SeaCOM Installer.exe
2. If you are using Windows Vista or newer operating systems, right click on the installer executable and choose 'Run as Administrator'. If you are using an operating system prior to Windows Vista, double click on the executable to launch the InstallShield and initiate the driver installation.
3. Please refer to step six above in the Guided Software Installation section and follow the remaining installation steps.

## UPGRADING TO THE CURRENT SEACOM DRIVER

1. Download the current driver using the Instructions from the Where to Get Software section above. Please take note of the destination directory it will save to.
2. Uninstall the currently loaded driver SeaCOM driver found in the Control Panel. Prior to Windows Vista SeaCOM will be populated in 'Add/Remove Programs' list. In Vista and newer OSs it will be found in the 'Programs and Features' list.
3. Navigate to the Device Manager and remove the Sealevel adapter by right clicking on the line item choosing 'Uninstall'. Depending on your product, it can be found under either 'Multiport Serial adapters' or 'Universal Serial Bus controllers'.
4. In the Device Manager under 'Action', choose 'Scan for Hardware changes'. This will prompt the installation of the adapter and associate it with the newly installed SeaCOM driver.

## LINUX SUPPORT

The 7402e is supported natively in Linux kernels 2.6.28 and later.

# Technical Description

The COMM+4.422.PCIE provides four RS-422/485 ports from a single PCIe slot.

The COMM+4.422.PCIE utilizes the OXPCIE954 type UART. This chip features programmable baud rates, data format, interrupt control and industry leading 128-byte transmit and receive FIFOs.

The UARTs are register compatible with 16C450, 16C550, 16C654 and 16C750 UARTs. The FIFO depth can be changed to match the depth of these UARTs.

## RS-422/485 (CA-200 DB-9) CONNECTOR PIN ASSIGNMENTS

Signal	Name	Pin #	Mode
GND	Ground	5	
TX +	Transmit Data Positive	4	Output
TX-	Transmit Data Negative	3	Output
RTS+	Request To Send Positive	6	Output
RTS-	Request To Send Negative	7	Output
RX+	Receive Data Positive	1	Input
RX-	Receive Data Negative	2	Input
CTS+	Clear To Send Positive	9	Input
CTS-	Clear To Send Negative	8	Input

## RS-422/485 (DB-44)

Port #	1	2	3	4
RS-422/485				
TX-	1	5	9	13
RX-	4	8	12	30
RTS-	2	6	10	14
CTS-	16	20	23	27
TX+	32	36	40	43
RTS+	31	35	39	42
RX+	3	7	11	15
CTS+	33	37	41	44
GND	17	21	24	28



The RTS output is only available in RS-422 mode. The RTS output is tri-stated in RS-485 mode and therefore unusable. The CTS input is available in all modes. Terminating these pins, if not used, will help ensure you get the best performance from your adapter.

# Specifications

## ENVIRONMENTAL SPECIFICATIONS

Specification	Operating	Storage
Temperature Range	0° to 70° C (32° to 158° F)	-50° to 105° C (-58° to 221° F)
Humidity Range	10 to 90% R.H. Non-Condensing	10 to 90% R.H. Non-Condensing

## MANUFACTURING

All Sealevel Systems Printed Circuit boards are built to UL 94V0 rating and are 100% electrically tested. These printed circuit boards are solder mask over bare copper.

## POWER CONSUMPTION

Supply line	+3.3VDC	+12VDC
Rating	100 mA	25 mA

# Appendix A – Troubleshooting

1. Identify all I/O adapters currently installed in your system. This includes your on-board serial ports, controller cards, sound cards etc. The I/O addresses used by these adapters, as well as the IRQ (if any) should be identified.
2. Configure your Sealevel Systems adapter so that there is no conflict with currently installed adapters. No two adapters can occupy the same I/O address.
3. Make sure the Sealevel Systems adapter is using a unique IRQ. While the Sealevel Systems adapter does allow the sharing of IRQs, many other adapters (i.e. SCSI adapters & on-board serial ports) do not. The IRQ is typically selected by the BIOS or operating system. Some BIOS setup software will allow changing the IRQ, but others

do not. Another method of changing assigned resources is to try changing PCIe slots. This will typically cause the BIOS or OS to reassign the resources.

4. Make sure the Sealevel Systems adapter is securely installed in a motherboard slot.
5. When running DOS\*\* or Windows 3.x\*\* refer to the supplied Sealevel Software and this User Manual to verify that the Sealevel Systems adapter is configured correctly. This software contains a diagnostic program 'SSD' (D:\software\seacom\Other\DOS\DIAG, where D: = the driver letter of your CDROM drive) will verify if an adapter is configured properly. This diagnostic program is written with the user in mind and is easy to use. You can use D:\software\seacom\Other\DOS\PCI\FindPCI.exe to determine resources that have been assigned to your adapter. Make sure that if available, the 'Use Plug-n-Play' option is turned 'OFF' in your BIOS. Having this option set to 'ON' in DOS or Windows 3.x will cause erratic operations.
6. For Windows95/98/ME/NT/2000/XP/Vista/7, the diagnostic tool 'WinSSD' is installed in the SeaCOM folder on the Start Menu during the setup process. First find the ports using the Device Manager, then use 'WinSSD' to verify that the ports are functional.
7. Always use the Sealevel Systems diagnostic software when troubleshooting a problem. This will eliminate any software issues from the equation.

# Appendix B - Handling Instructions

## ESD Warnings

### Electrostatic Discharges (ESD)

- A sudden electrostatic discharge can destroy sensitive components. Proper packaging and grounding rules must therefore be observed. Always take the following precautions: Transport boards and cards in electrostatically secure containers or bags.
- Keep electrostatically sensitive components in their containers, until they arrive at an electrostatically protected workplace.
- Only touch electrostatically sensitive components when you are properly grounded.
- Store electrostatically sensitive components in protective packaging or on anti-static mats.

## Grounding Methods

The following measures help to avoid electrostatic damages to the device:

- Cover workstations with approved antistatic material. Always wear a wrist strap connected to a properly grounded workplace.
- Use antistatic mats, heel straps, and/or air ionizers for more protection.
- Always handle electrostatically sensitive components by their edge or by their casing.
- Avoid contact with pins, leads, or circuitry.
- Turn off power and input signals before inserting and removing connectors or connecting test equipment.
- Keep work area free of non-conductive materials such as ordinary plastic assembly aids and Styrofoam.
- Use field service tools such as cutters, screwdrivers, and vacuum cleaners that are conductive.

# Appendix C - Electrical Interface

## RS-422

The RS-422 specification defines the electrical characteristics of balanced voltage digital interface circuits. RS-422 is a differential interface that defines voltage levels and driver/receiver electrical specifications. On a differential interface, logic levels are defined by the difference in voltage between a pair of outputs or inputs. In contrast, a single ended interface, for example RS-232, defines the logic levels as the difference in voltage between a single signal and a common ground connection. Differential interfaces are typically more immune to noise or voltage spikes that may occur on the communication lines. Differential interfaces also have greater drive capabilities that allow for longer cable lengths. RS-422 is rated up to 10 Megabits per second and can have cabling 4000 feet long. RS-422 also defines driver and receiver electrical characteristics that will allow 1 driver and up to 32 receivers on the line at once. RS-422 signal levels range from 0 to +5 volts. RS-422 does not define a physical connector.

## RS-485

RS-485 is backwardly compatible with RS-422; however, it is optimized for party line or multi-drop applications. The output of the RS-422/485 driver is capable of being Active (enabled) or Tri-State (disabled). This capability allows multiple ports to be connected in a multi-drop bus and selectively polled. RS-485 allows cable lengths up to 4000 feet and data rates up to 10 Megabits per second. The signal levels for RS-485 are the same as those defined by RS-422. RS-485 has electrical characteristics that allow for 32 drivers and 32 receivers to be connected to one line. This interface is ideal for multi-drop or network environments. RS-485 tri-state driver (not dual-state) will allow the electrical presence of the driver to be removed from the line. Only one driver may be active at a time and the other driver(s) must be tri-stated.

# Appendix D - Asynchronous Communications

Serial data communications implies that individual bits of a character are transmitted consecutively to a receiver that assembles the bits back into a character. Data rate, error checking, handshaking, and character framing (start/stop bits) are pre-defined and must correspond at both the transmitting and receiving ends.

Asynchronous communications is the standard means of serial data communication for PC compatibles and PS/2 computers. The original PC was equipped with a communication or COM: port that was designed around an 8250 Universal Asynchronous Receiver Transmitter (UART). This device allows asynchronous serial data to be transferred through a simple and straightforward programming interface. A starting bit followed by a pre-defined number of data bits (5, 6, 7, or 8) defines character boundaries for asynchronous communications. The end of the character is defined by the transmission of a pre-defined number of stop bits (usually 1, 1.5 or 2). An extra bit used for error detection is often appended before the stop bits.


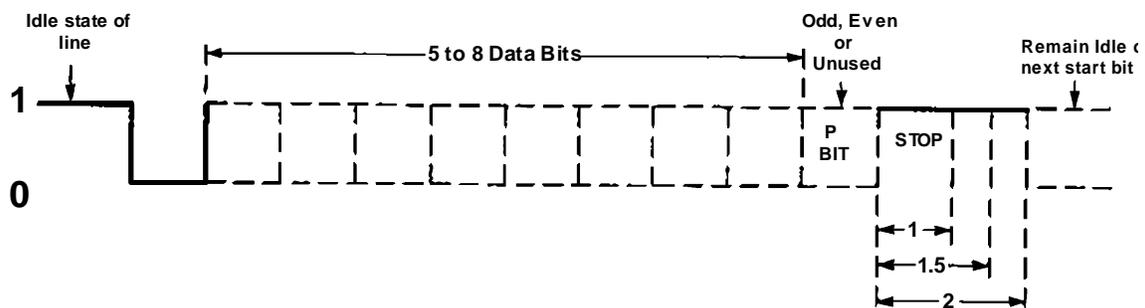


Figure 1 - Asynchronous Communications Bit Diagram

This special bit is called the parity bit. Parity is a simple method of determining if a data bit has been lost or corrupted during transmission. There are several methods for implementing a parity check to guard against data corruption. Common methods are called (E)ven Parity or (O)dd Parity. Sometimes parity is not used to detect errors on the data stream. This is referred to as (N)o parity. Because each bit in asynchronous communications is sent consecutively, it is easy to generalize asynchronous communications by stating that each character is wrapped (framed) by pre-defined bits to mark the beginning and end of the serial transmission of the character. The data rate and communication parameters for asynchronous communications have to be the same at both the transmitting and receiving ends. The communication parameters are baud rate, parity, number of data bits per character, and stop bits (i.e. 9600,N,8,1).

# Appendix E - Mechanical Drawing

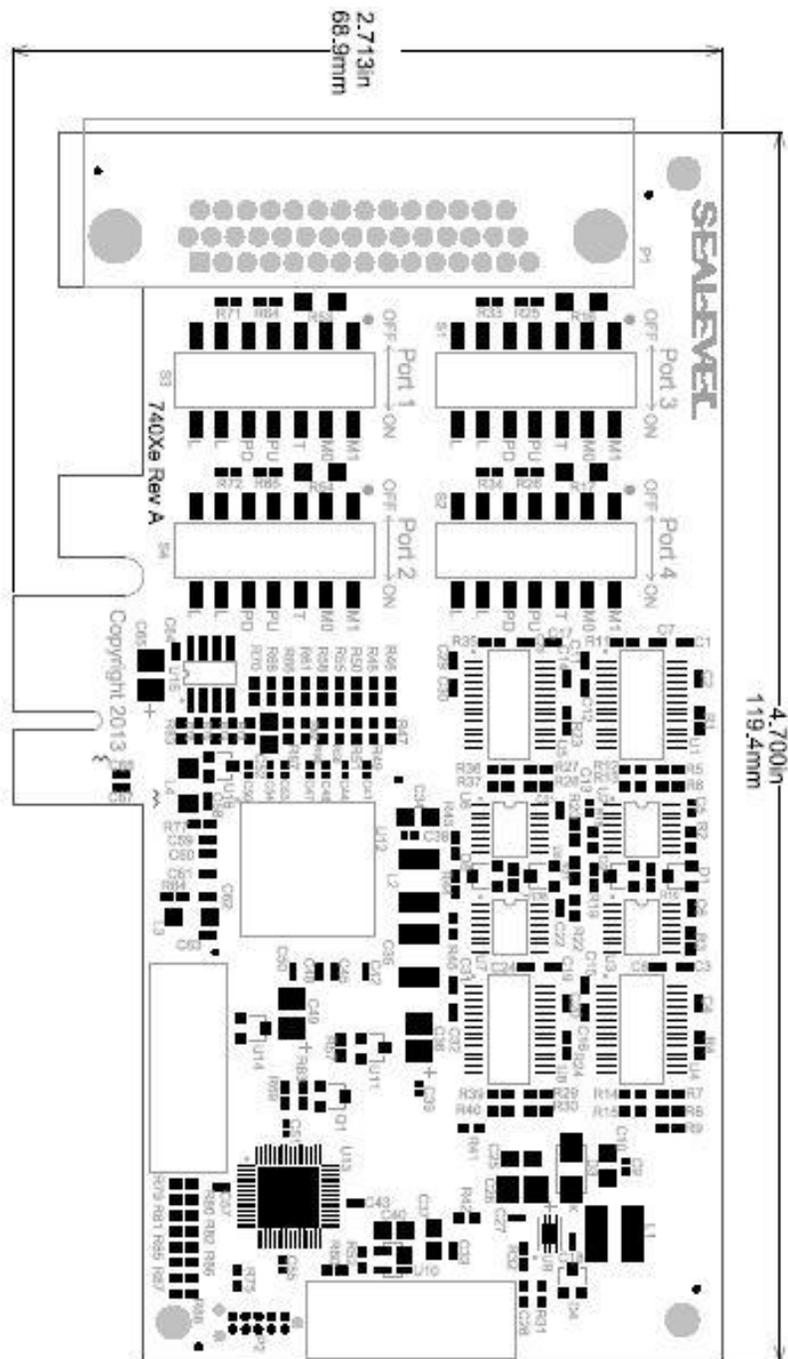

# Warranty

Sealevel's commitment to providing the best I/O solutions is reflected in the Lifetime Warranty that is standard on all Sealevel manufactured I/O products. Relio™ industrial computers are warranted for a period of two years and the R9 family is warranted for a five year period from date of purchase. We are able to offer this warranty due to our control of manufacturing quality and the historically high reliability of our products in the field. Sealevel products are designed and manufactured at its Liberty, South Carolina facility, allowing direct control over product development, production, burn-in and testing. Sealevel achieved ISO-9001:2008 certification in 2011.

## Warranty Policy

Sealevel Systems, Inc. (hereafter "Sealevel") warrants that the Product shall conform to and perform in accordance with published technical specifications and shall be free of defects in materials and workmanship for the warranty period. In the event of failure, Sealevel will repair or replace the product at Sealevel's sole discretion. Failures resulting from misapplication or misuse of the Product, failure to adhere to any specifications or instructions, or failure resulting from neglect, abuse, accidents, or acts of nature are not covered under this warranty.

Warranty service may be obtained by delivering the Product to Sealevel and providing proof of purchase. Customer agrees to insure the Product or assume the risk of loss or damage in transit, to prepay shipping charges to Sealevel, and to use the original shipping container or equivalent. Warranty is valid only for original purchaser and is not transferable.

This warranty applies to Sealevel manufactured Product. Product purchased through Sealevel but manufactured by a third party will retain the original manufacturer's warranty.

## Non-Warranty Repair/Retest

Products returned due to damage or misuse and Products retested with no problem found are subject to repair/retest charges. A purchase order or credit card number and authorization must be provided in order to obtain an RMA (Return Merchandise Authorization) number prior to returning Product.

## How to obtain an RMA (Return Merchandise Authorization)

If you need to return a product for warranty or non-warranty repair, you must first obtain an RMA number. Please contact Sealevel Systems, Inc. Technical Support for assistance:

Available	Monday – Friday, 8:00AM to 5:00PM EST
Phone	864-843-4343
Email	<a href="mailto:support@sealevel.com">support@sealevel.com</a>

## Trademarks

Sealevel Systems, Incorporated acknowledges that all trademarks referenced in this manual are the service mark, trademark, or registered trademark of the respective company.